


## **UltimateAir** Recommended Ventilation Ducting Kit for the **200DX** ERV

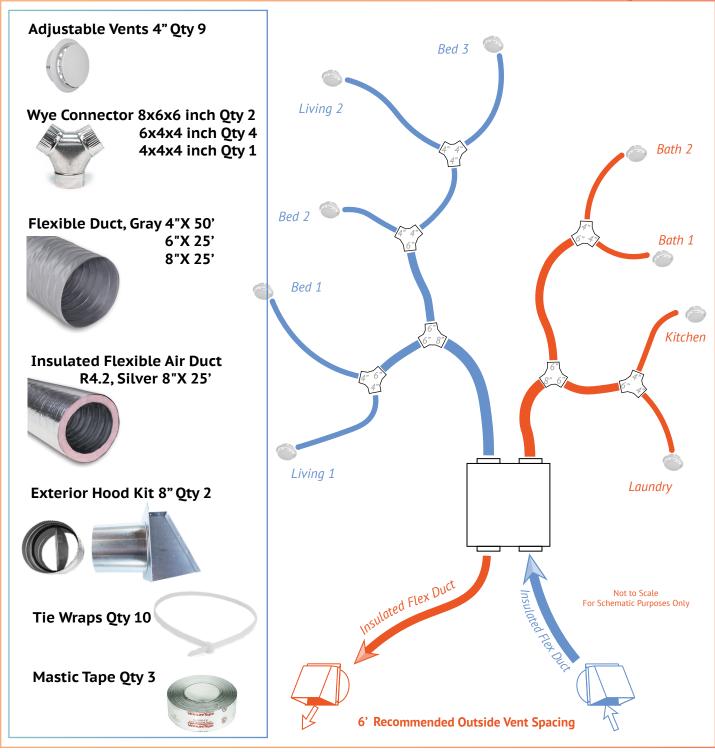








1. Peel & Place Starter Collar on Ventilation unit & Secure to unit with Tek Screws



2. Add 8" - 6" Reducer & Secure with Tek Screws



3. Tape Inner Duct

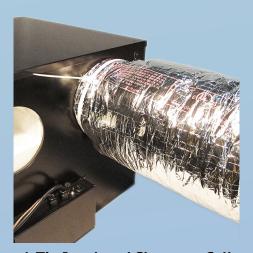

4. Tie Insulated Sleeve to Collar

